2.Exploded Views and Parts List

2-1 Total Exploded View

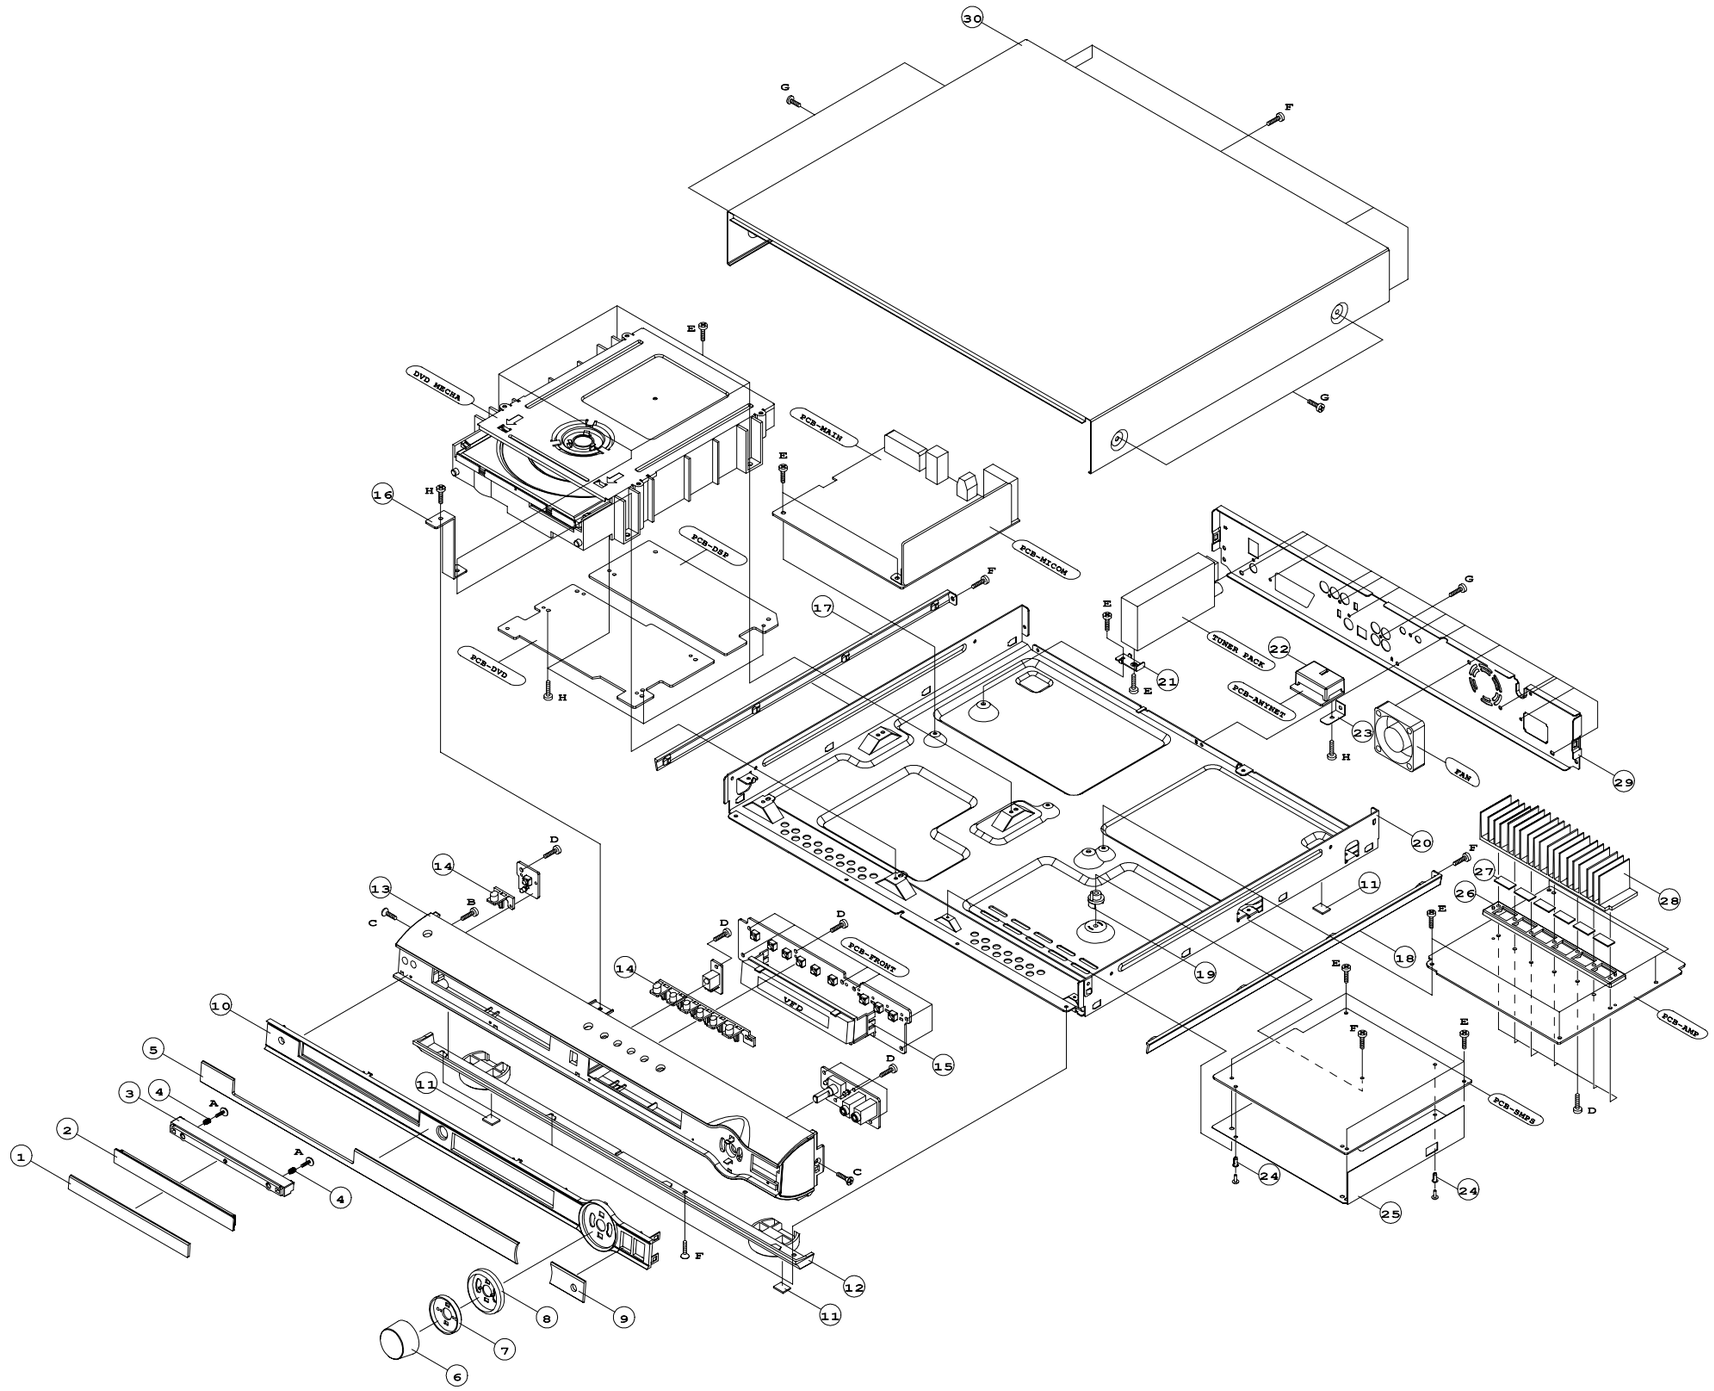

*** Parts List of Total Exploded view**

No.	Code No.	Description	Specification	Q'ty	REMARK
1	AH64-02565B	WINDOW-CD	ACRYL 2.0T	1	
2	AH64-02561A	DOOR-CD	ABS BLK	1	
3	AH61-01404A	HOLDER-DOOR	ABS BLK	1	
4	AH61-01325A	SPRING-DOOR	SUS304	2	
5	AH64-02587A	WINDOW-VFD	ACRYL 2.0T	1	
6	AH64-02562A	KNOB-VOLUME	ABS PLATE	1	
7	AH67-00228A	LENS-VOLUME	PMMA MILKY	1	
8	AH64-02567B	DECO-VOLUME	ABS GRAY	1	
9	AH64-02586E	WINDOW-PHONES	ACRYL 2.0T	1	
10	AH64-02583B	DECO-FRONT	ABS BLK	1	
11	AH73-00005A	CUSHION-FOOT	EVA 2.0T	4	
12	AH64-02582B	DECO-PANEL	ABS BLK	1	
13	AH64-02843C	CABINET-FRONT	MIPS GRAY	1	HT-DS700
	AH64-02843E	CABINET-FRONT	MIPS GRAY	1	HT-DS900
14	AH64-02563B	KNOB-FUNCTION	ABS GRAY	1	
15	AH61-01405A	HOLDER-VFD	ABS BLK	1	
16	AH61-01453A	BRACKET-FRONT	SECC 0.8T	1	
17	AH64-02585B	DECO-BOTTOM-L	ABS BLK	1	
18	AH64-02584B	DECO-BOTTOM-R	ABS BLK	1	
19	AH61-00774A	HOLDER-PCB	ABS GRAY	1	
20	AH64-02844A	CABINET-BOTTOM	SECC 0.8T	1	
21	AH61-01355A	BRACKET-TUNER	SECC 1.0T	1	
22	AH61-01580A	HOLDER-ANINET	ABS	1	
23	AH61-01628A	BRKT-GND,ANYNET	PBS 0.3T	1	
24	AH61-40014A	SUPPORT-RIVET	PP BLACK	2	
25	AH63-00733A	SHEET-SMPS	PC 0.5T	1	
26	AH61-01579A	HOLDER-HEATSINK	ABS+GP30%	1	
27	AH62-00126A	INSULATION-RUBBER	GAP PAD 1.0T	6	
28	AH62-00125A	HEAT-SINK	AL	1	
29	AH64-02845D	CABINET-REAR	SECC 0.6T	1	
30	AH64-01588B	CABINET-TOP	SECC 0.6T	1	

No.	Code No.	Description	Specification	Q'ty	REMARK
A	6003-001496	SCREW-TAPTITE	BWH 2.5*6, YEL	2	
B	6001-001744	SCREW-TAPTITE	RH 2.6*8 YEL	1	
C	6002-000126	SCREW-TAPTITE	FH 3*8 BLK	2	
D	6003-000276	SCREW-TAPTITE	BH 3*10 YEL	19	
E	6003-000398	SCREW-TAPTITE	BH 3*6 YEL	17	
F	6003-001232	SCREW-TAPTITE	BH 3*8 BLK	6	
G	6003-001464	SCREW-TAPTITE	BH 3*10 SIL	21	
H	6003-000283	SCREW-TAPTITE	BH 3*8 YEL	6	

2-2 DVD MECHA Exploded View and Parts list

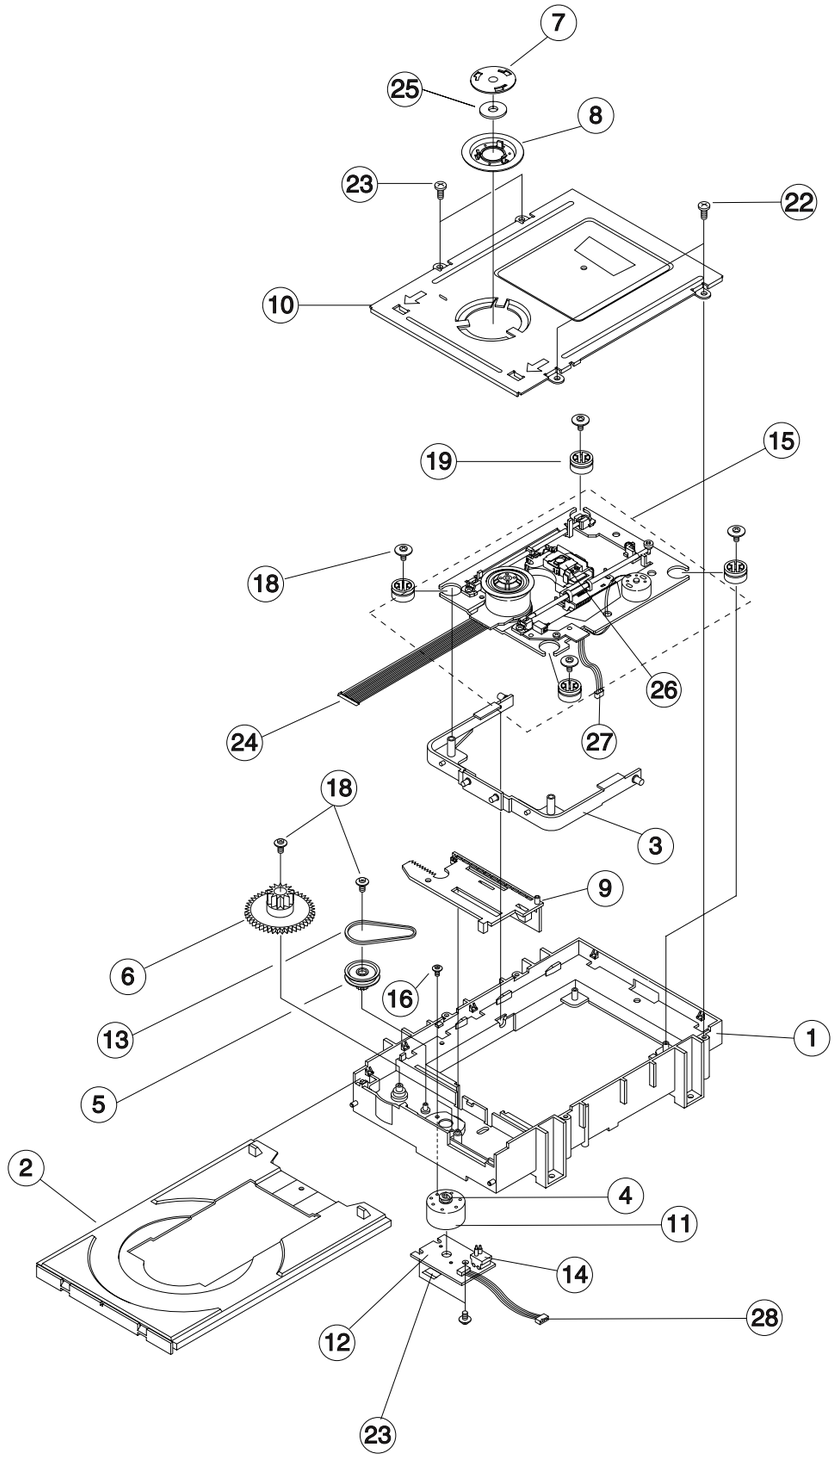

No.	Code No.	Description ;	Specification
	AH59-01153A	**DECK-MECHA ASS'Y**	**CMS-SD100**
1	AH61-01293A	BASE-MAIN	ABS BLK
2	AH63-00535A	TRAY-DISC	ABS D/GRAY
3	AH66-00214A	LEVER-LIFT	ABS+GF20%
4	AH66-00215A	PULLEY-MOTOR	POM WHT
5	AH66-00216A	GEAR-PULLEY	TPE WHT
6	AH66-00217A	GEAR-TRAY	POM WHT
7	AH61-01295A	CLAMPER-BRKT	SECC t0.8
8	AH63-00536A	CLAMPER-MOLD	POM WHT
9	AH66-00218A	SLIDE-CAM	PC WHT
10	AH61-01296A	HOLDER-BRACKET	SECC t0.8
11	AH31-00030B	MOTOR-DC	RF-300E-1D390
12	AH41-00560A	PCB-SWITCH	43.5 * 32.5
13	AH66-00219A	BELT-PULLEY	CR 1.2
14	3409-001119	SWITCH-DETECTOR	JDS2200
15	AH59-01184A	DVD-DECK ASSY	CMS-S51PG4
16	6001-001257	SCREW-MACHINE	1.7*3(W4.5)
17	AJ60-10001A	SCREW-TAP	WASHER 6.8
18	6003-000152	SCREW-TAP	2*10.12
19	AH73-00058A	RUBBER-CD	SILICON 30
20	0205-001106	GREASE	GX-99004
21	0205-001109	GREASE	DM-523
22	6003-000283	SCREW	TAP 3*8
23	AH02-00038A	TAPE	10mm*80mm
24	3809-001451	CABLE-FLAT	60mm 24P
25	3302-001505	MAGNET CHUCK	190 gf
26	AH30-00055A	PICK-UP	4P.JST
27	AH39-00495A	WIRE-HARNESS	UL1007,#28,70mm
28	AH39-00496A	WIRE-HARNESS	UL1007,#28,65mm

**** Caution:** The MECHA does not include the DECK ASS'Y.*
The DECK ASS'Y must be ordered separately when repairing.

2-3 SPEAKER Composite View

2-3-1 HT-DS700

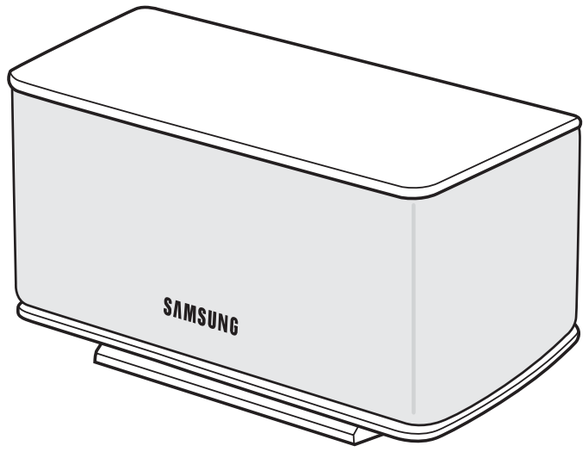

Center Speaker : AH81-01457C

(PSCS700E)

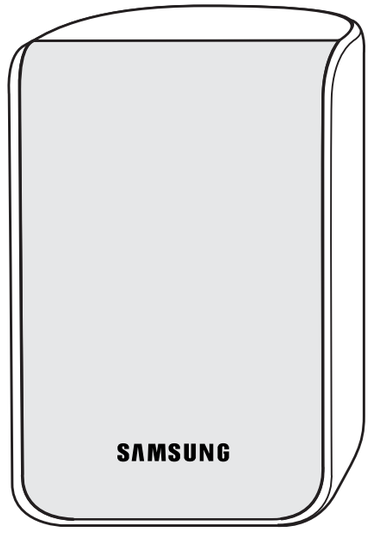

Front Speaker : AH81-01457B

(PSFS700E)

Rear Speaker : AH81-01457D

(PSRS700E)

* CAUTION : The NET FRAME(or FRONT PANEL ASS'Y) uses bonding to connect to CABINET ASS'Y.
The extreme care not to damage the SPEAKER during disassembly.

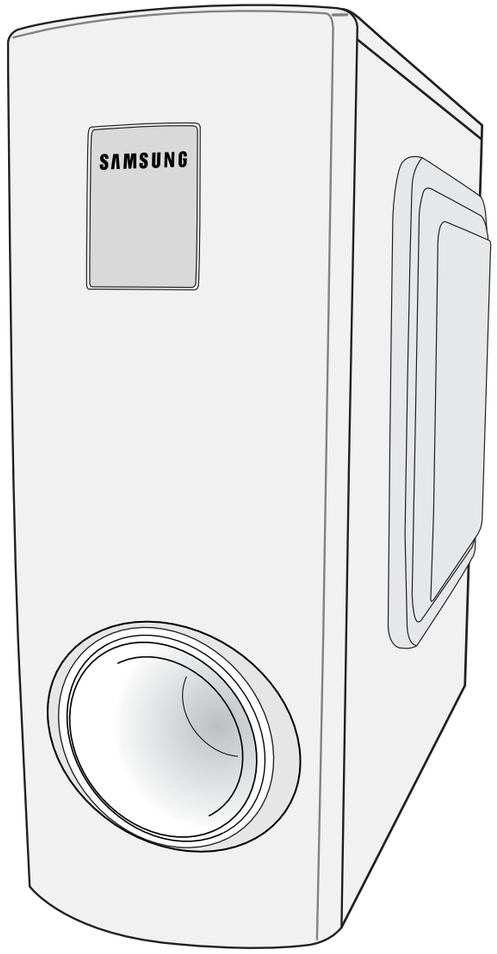

SUBWOOFER : AH81-01457E

(PSWS700E)

Reflecter SPK (LEFT):

AH81-01451P

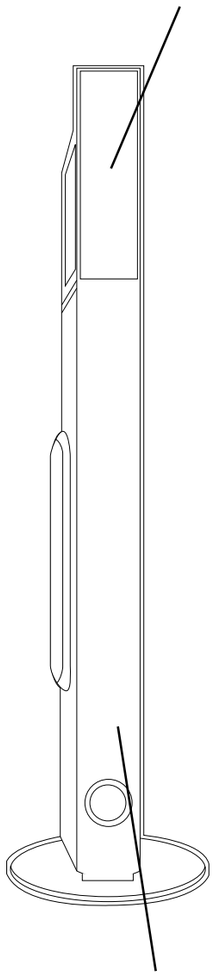

Center Speaker :

AH81-01451A

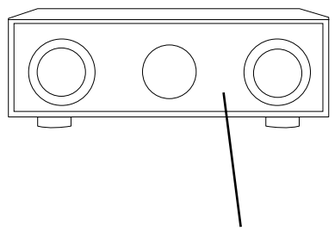

Reflecter SPK (RIGHT):

AH81-01451Q

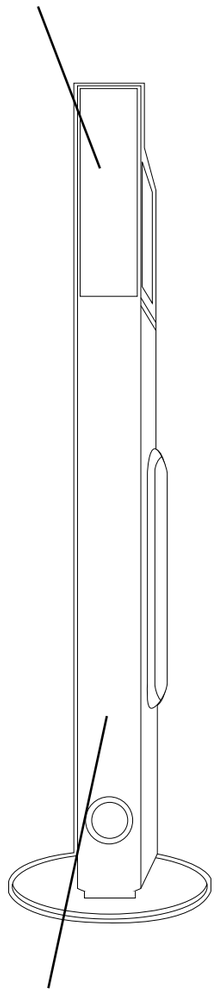

Subwoofer (LEFT):

AH81-01451R

Subwoofer (RIGHT):

AH81-01451S

* CAUTION : The NET FRAME(or FRONT PANEL ASS'Y) uses bonding to connect to CABINET ASS'Y.
The extreme care not to damage the SPEAKER during disassembly.

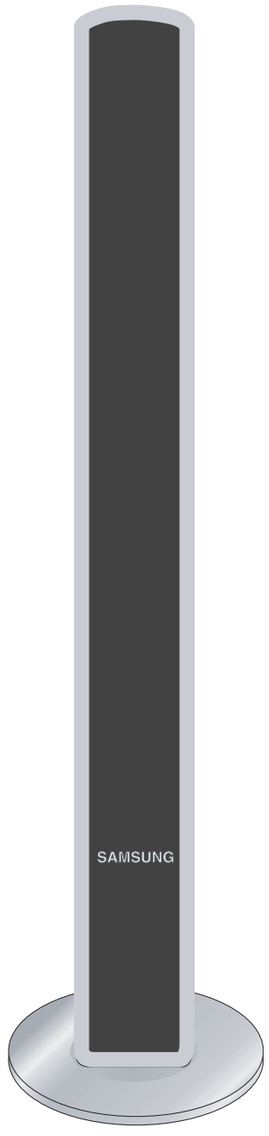

Front Speaker: AH81-01533B
(PSFS900E)

Rear Speaker : AH81-01533C
(PSRS900E)

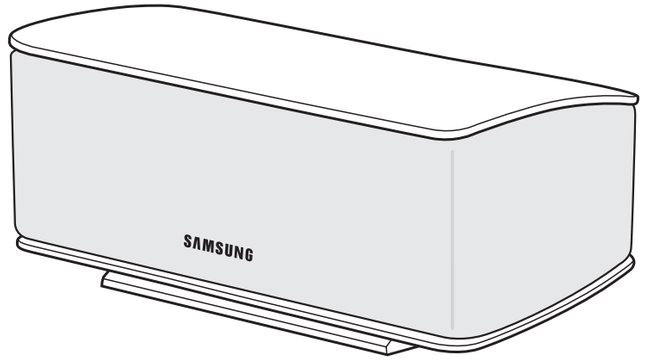

Center Speaker : AH81-01533D
(PSCS900E)

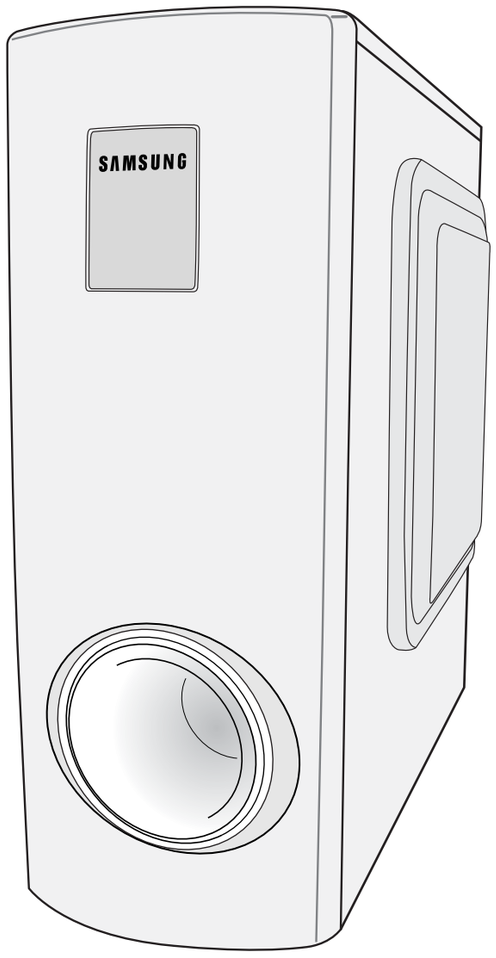

Subwoofer : AH81-01533E
(PSWS900E)